



Digital Projector X56

Operator's Guide Instant Stack Guide



Thank you for purchasing this product.

This manual is intended to explain only Instant Stack feature. Other than what is mentioned in this manual, please see other manuals of this product.

Features

This projector can be used with another projector of the same type to project an image on the same screen using the Instant Stack feature.

The two projectors can be operated simultaneously to make the image brighter.

Moreover, if you connect two projectors with RS-232C cross-over cable, it turns to a kind of intellectual stacking system. The two projectors can work alternately by themselves, and once one projector has an accident the other voluntarily starts to work to keep your presentation going.

These features, generically called Instant Stack, provide you with the broad use.

⚠ WARNING ► Before using this product, be sure to read all manuals for this product. After reading them, store them in a safe place for future reference.

► Follow all the instructions in the manuals or on the product. The manufacturer assumes no responsibility for any damage caused by mishandling that is beyond normal usage defined in the manuals.

NOTE • The information in this manual is subject to change without notice.

- The manufacturer assumes no responsibility for any errors that may appear in this manual.

- The reproduction, transfer or copy of all or any part of this document is not permitted without express written consent.

Trademark acknowledgment

All the trademarks in this manual are the properties of their respective owners.

Contents

1. Introduction	3	3. STACK menu settings	17
1.1 Entries and graphical symbols explanation	3	3.1 Displaying STACK menu	17
1.2 Important safety instruction	3	3.2 Selecting Main, Sub or off	18
Instant Stack feature	3	3.3 Selecting lamp operation mode ..	19
General installation	5	3.4 Selecting lamp switching mode ..	21
1.3 Basic information and preparations	6	3.5 Selecting input source for Sub....	22
Instant Stack	6	3.6 Exiting Intellectual Stack menu	23
Intellectual Stack and Simple Stack.....	6	STACK menu	23
Remote control for Intellectual Stack and Simple Stack	6	Dialog from STACK menu.....	23
Installation styles	6	3.7 Important information for Intellectual Stack	24
Tentative terms for the two projectors..	6	4. Connecting cables	27
2. Installation	7	4.1 Connecting an RS-232C cable ...	27
2.1 Preparing for Intellectual Stack.....	7	4.2 Connecting signal cables.....	28
2.2 Installing the first projector (Set A)	8	Inputting image from Main to Sub.....	28
Removing pocket caps	8	Inputting image to Sub and Main individually.....	28
Preparing elevator feet	8	5. Setting input ports using menu	29
Deciding installation position	8	5.1 Preparing for menu operations... ..	29
Setting up Set A	9	5.2 Checking Main projector's operating status.....	29
2.3 Installing the second projector (Set B)	11	5.3 Starting up Main projector	30
Stacking the projectors	11	5.4 Setting the menu	31
Connecting projectors	11	Inputting image from Main to Sub - Computer signal	31
Setting up Set B	12	Inputting image from Main to Sub - Video signal (either component or video)	32
2.4 Confirming Main and Sub settings.....	14	Inputting image to Sub and Main individually.....	32
2.5 Fine adjusting image position	15	6. Restrictions on Schedule function	34
For Intellectual Stack users	15	7. Troubleshooting	36
For Simple Stack users.....	16		

1. Introduction

1.1 Entries and graphical symbols explanation

The following entries and graphical symbols are used for the manuals and the product as follows, for safety purpose. Please know their meanings beforehand, and heed them.

- ⚠ WARNING** This entry warns of a risk of serious personal injury or even death.
- ⚠ CAUTION** This entry warns of a risk of personal injury or physical damage.
- NOTICE** This entry notices of fear of causing trouble.


1.2 Important safety instruction

The followings are important instructions for safely using the product in Instant Stack. First of all, read the following instructions and be sure to always follow them when using Instant Stack of this product.

Instant Stack feature

⚠ WARNING ► Take a special care not to fall the stacked projectors.

- When stacking two projectors, make sure the elevator feet and heel of the upper projector are inserted into the corresponding pockets of the lower projectors. (11)
- When using the Instant Stack function by piling up two projectors, you can change the projection angle by adjusting the elevator feet of the unit that is placed underneath. (8) Exercise care to prevent the stacked projector from falling off or tipping over while adjusting the elevator feet.
- A maximum of two projectors can be stacked. Do not stack three or more projectors.
- Do not install the projectors that are stacked using the stack pockets, elevator feet and heel of this projector at a place higher than a person's height.
- Do not install the projectors that are stacked using the stack pockets, elevator feet and heel of this projector on a ceiling.
- Do not touch the stacked projectors except when instructions are given in this manual. Do not hit the projectors with any type of object.

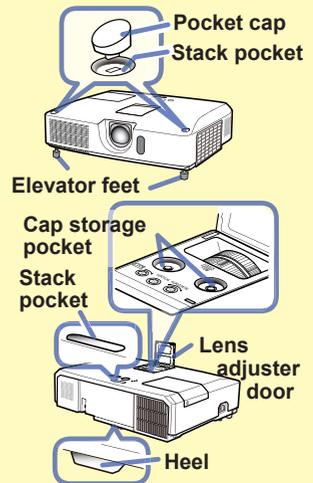

(continued on next page)

1.2 Important safety instruction - For Instant Stack feature (continued)

⚠ WARNING ► When removing the pocket caps from the stack pockets, be sure to store them securely and safely inside the lens adjuster door to prevent children and pets from swallowing the caps. (📖3) If swallowed, consult a physician immediately.

⚠ CAUTION ► Be careful not to injure your nail and finger when removing the pocket caps. (📖3)

NOTICE ► Instant Stack is a feature that allows you to stack two projectors or arrange them side by side easily. Depending on the installation and surrounding environment, images projected from the two projectors may not superimpose well enough. The images cannot superimpose well enough especially when the screen is slanted, deformed or the surface is uneven.

- Images projected immediately after turning on the projectors are unstable due to rising internal temperature. Wait for more than 20 minutes before starting to adjust the superimposed images.
- The image positions may shift due to temperature change, vibration, or shock caused by hitting the projector. Install the projectors in a stable environment when using Instant Stack. If the image positions are shifted, readjust the images. (📖9, 12, 15)
- The image positions may shift over time due to the tension and the weight of the connecting cables. Make sure not to impose any load on the projectors when arranging the cables.
- If the volume level of the built-in speakers is too high, the two projectors may resonate, noise may occur and the image quality may deteriorate. In this case, check the volume setting on both projectors. Lower the volume until the symptoms disappear or arrange the projectors side by side.
- When two projectors are connected using the RS-232C cable, the Main projector will be able to control the Sub projector. This feature is known as Intellectual Stack. (📖11) When Intellectual Stack by means of RS-232C feature is used, RS-232C communication cannot be used to control the projector. If you wish to control the projectors, use the LAN connection that is connected to any of the projectors.
- When Intellectual Stack is used, the operations or settings of some functions are restricted. Refer to this manual for details. (📖34)

General installation

⚠ WARNING ► Install the projector where you can access the power outlet easily.

- Do not subject the projector to unstable conditions. Install the projector in a stable horizontal position.
- Do not use any mounting accessories except the accessories specified by the manufacturer. Read and keep the manuals of the accessories used.
- For special installation such as ceiling mounting, be sure to consult your dealer beforehand. Specific mounting accessories and services may be required.
- Do not install the projector near thermally conductive or flammable things.
- Do not place the projector where any oils, such as cooking or machine oil, are used.
- Do not place the projector in a place where it may get wet.

⚠ CAUTION ► Place the projector in a cool place with sufficient ventilation.

- Keep a space of 30 cm or more between a side of the projector and other objects such as a wall. If you install two projectors in [Style 2 \(M6\)](#), keep a space of 30 cm or more between the two projectors.
- Do not stop up, block nor cover the projector's vent holes.
- Do not place the projector at places that are exposed to magnetic fields, doing so can cause the cooling fans inside the projector to malfunction.
- Avoid placing the projector in smoky, humid or dusty place.
- Do not place the projector near humidifiers. Especially for an ultrasonic humidifier, chlorine and minerals contained in tap water are atomized and could be deposited in the projector causing image degradation or other problems.

NOTICE ► Position the projector to prevent light from directly hitting the projector's remote sensor.

- Do not place the product in a place where radio interference may be caused.

1.3 Basic information and preparations

Instant Stack

Instant Stack is a feature that allows you to superimpose images projected from two projectors easily. This projector is designed to provide this feature, with functions to install two projectors and superimpose the images.

Intellectual Stack and Simple Stack

Instant Stack includes the following two features.

When two projectors are connected via an RS-232C cable with necessary settings performed on the projectors, these two projectors will automatically operate in synchronization with each other according to the settings. This is known as Intellectual Stack in this manual.

The two projectors operate individually without the RS-232C connection. This is known as Simple Stack in this manual.

Remote control for Intellectual Stack and Simple Stack

For Intellectual Stack, one projector is set as Main and the other is set as Sub. (📖 18) Only the Main projector is capable of receiving the remote control signals. To operate the Sub projector, you need to point the remote control at the Main projector.

For Simple Stack, both projectors can receive the remote control signals. To avoid crosstalk when operating with the remote control, it is recommended to operate one projector with the remote control and the other with the control panel on the projector or a wired remote control. In this case, disable the remote control receiving on the other projector with the KEY LOCK feature. (📖 [Operator's Guide](#) → [OPTION menu](#))

Installation styles

Following are two styles to install the projectors. Instant Stack supports both styles.

Style 1 : Stack vertically

Style 2 : Arrange side by side


The descriptions in this manual are mainly on Style 1 installation. If you wish to install two projectors in Style 2, refer to the descriptions required in this manual.

Tentative terms for the two projectors

For better understanding of the descriptions in this manual, the following terms are used when explaining the vertical stacking installation.

Set A : Projector placed underneath

Set B : Projector placed on top of Set A

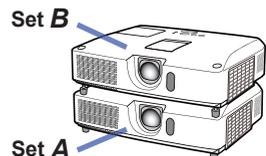

2. Installation

For safety reasons, read [1.2 Important safety instruction](#) (📖3~5) carefully before installation. In addition, take note of the followings for proper use of Instant Stack.

- When using Intellectual Stack, both projectors will respond to the remote control signals until STACK MODE on either projector is set to SUB.
During installation, it is recommended to operate one projector with the remote control and the other with the control panel on the projector or a wired remote control. In this case, disable the remote control receiving on the other projector with the KEY LOCK feature. (📖[Operator's Guide](#) → [OPTION menu](#))
- Images from Set **A** and Set **B** may superimpose well but the image positions can shift over time.
Readjust to superimpose the images.
- If the volume level of the built-in speakers is too high, the two projectors may resonate, noise may occur and the image quality may deteriorate.
In this case, check the volume setting on both projectors. Lower the volume until the symptoms disappear or arrange the projectors side by side. If the image positions are shifted, readjust.

2.1 Preparing for Intellectual Stack

When using Intellectual Stack via RS-232C connection, ensure the following settings are set on the two projectors. Otherwise, the Intellectual Stack menu cannot be operated.

- STANDBY MODE in SETUP menu: NORMAL
(📖[Operator's Guide](#) → [SETUP menu](#))
- COMMUNICATION TYPE under COMMUNICATION in SERVICE menu: OFF
(📖[Operator's Guide](#) → [OPTION menu](#))
- STACK LOCK in SECURITY menu: OFF

When STACK LOCK is set to on, menus related to Instant Stack cannot be operated. It is therefore necessary to set it to off during installation and menu setting.

(1) Use the ▲/▼/◀/▶ buttons to go into the following menu.

ADVANCED MENU > SECURITY
> STACK LOCK

STACK LOCK dialog will appear on screen. (📖[Operator's Guide](#) → [SECURITY menu](#))




(2) Use the ▲/▼ buttons to highlight OFF, and press the ▶ button to complete the setting.

2.2 Installing the first projector (Set A)

Removing pocket caps


When stacking the two projectors, remove the pocket caps on Set A.

CAUTION ► It is recommended to use a pin or the like to remove the caps. If you are using finger, be careful not to injure your nail and finger.

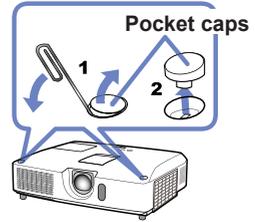

NOTE • Cap storage pockets for the pocket caps are inside the lens adjuster door. Be sure to keep the caps in the storage pockets after removing the caps from the stack pockets.


To store the cap to the pocket, place the thin end of the cap into the pocket first, then push the other side of the cap down firmly to the bottom of the pocket. It is important to ensure that the caps are securely stored to prevent children and pets from swallowing them.

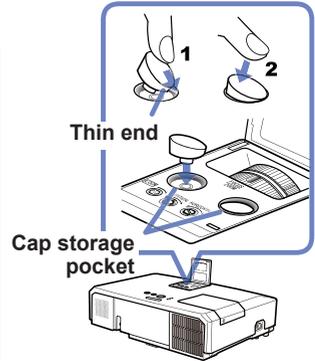

Preparing elevator feet

When stacking the two projectors, set the length of the elevator feet to the minimum using the elevator buttons on Set A and B.

CAUTION ► Be careful when stacking the two projectors, the projector on top may slide down.

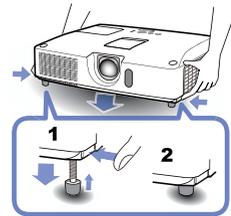

Deciding installation position

Decide the position of Set A and its projection angle. ([Operator's Guide](#) → [Arrangement](#) and [Adjusting the projector's elevator](#))

NOTE • Set the tilt angle of Set A to within 12 degrees from the level line.

- Take the followings into account when considering the installation position.
- **VERTICAL** adjuster should be set to the upper limit position.
- **ZOOM** ring should not be set to the widest position.
- **HORIZONTAL** adjuster is recommended to be set near the center position.

Setting up Set A

1. Turn on Set **A**.
2. Set the lens position to the upper limit with the **VERTICAL** adjuster.

NOTE • If it is not set to the upper limit, the image of Set **B** may not superimpose well enough to the image of Set **A**.

- Perform the MIRROR setting first if necessary as it may change the image position. ([Operator's Guide](#) → [SETUP menu](#))
- **HORIZONTAL** adjuster is recommended to be set near the center position.

3. Adjust the image of Set **A** to fit the screen with the **VERTICAL** adjuster, **HORIZONTAL** adjuster, **ZOOM** ring and **FOCUS** ring. ([Operator's Guide](#) → [Displaying the picture](#))
Adjust the image position using KEYSTONE and PERFECT FIT if necessary. ([Operator's Guide](#) → [EASY MENU](#) or [SETUP menu](#))

NOTE • Do not adjust **ZOOM** ring to the widest position, otherwise the image of Set **B** may not superimpose well enough to the image of Set **A**. Fine adjusting the image position of Set **B** electrically does not increase its image size. Use the **ZOOM** ring to adjust the image size of Set **B** to slightly larger than Set **A**.

 
- KEYSTONE cannot be operated when PERFECT FIT is in use. To adjust the image using both KEYSTONE and PERFECT FIT, adjust KEYSTONE first.
- If you are using Simple Stack, go to [2.3 Installation of the second projector \(Set B\)](#). ([11](#))

4. Display the menu with the **MENU** button. ([Operator's Guide](#) → [Using the menu function](#))
5. Use the **▲/▼/◀/▶** buttons to go into the following menu.

ADVANCED MENU > OPTION
> SERVICE > COMMUNICATION
> STACK

STACK menu will appear on screen.

([Operator's Guide](#) → [OPTION menu](#))




(continued on next page)

2.2 Installing the first projector (Set A) - Setting up Set A (continued)

6. Use the ▲/▼ buttons to highlight STACK MODE, and press the ► button to display the STACK MODE dialog. Highlight SUB pressing the ▲/▼ buttons, and press the ► button.



 7. After pressing the ► button, a dialog to confirm whether or not to save the setting is displayed.



Press the ► button to complete the setting. (📖23)

8. If you are using Intellectual Stack, disable the remote control receiving using KEY LOCK. (📖Operator's Guide → OPTION menu)


NOTE • Set A will not be operated by the remote control hereafter. To avoid crosstalk when operating with the remote control, it is recommended to disable the remote control receiving using KEY LOCK.

• After the STACK MODE setting is completed, Set A (Sub) will not be able to receive the remote control signals. When STACK MODE is set to OFF, enable the remote control receiving using KEY LOCK if necessary.

2.3 Installing the second projector (Set B)

Stacking the projectors

- Place Set **B** on Set **A** when stacking the two projectors. Make sure the heel on the bottom of Set **B** is inserted into the corresponding pocket on the top of Set **A**.
- With Set **B** placed on Set **A**, push the elevator buttons of Set **B** to extend the elevator feet without lifting Set **B**. Make sure the elevator feet reach the bottom of the stack pockets on Set **A**.

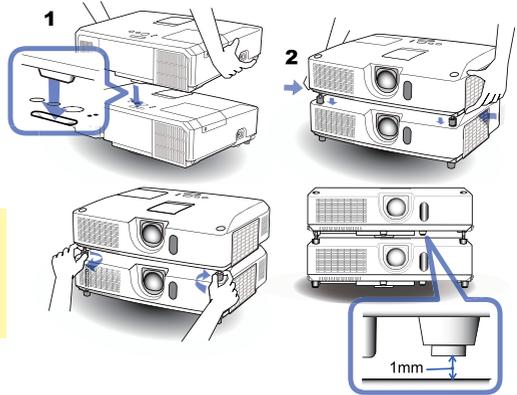

CAUTION ▶ Be careful when stacking the two projectors, the projector on top may slide down.



- Rotate the elevator feet of Set **B** twice in the counterclockwise direction and leave a gap of about 1 mm between the protrusion at the bottom of Set **B** and the top of Set **A** as shown in the figure.

NOTE • It is necessary to keep Set **B** slightly away from Set **A** except for the heel portion to prevent the two projectors from resonating due to the sound output from the built-in speakers.

- If Set **B** is tilt further, the image of Set **B** may not be superimposed to the image of Set **A**.
- If the elevator feet of Set **A** are used, make sure the tilt angle for both sets is within 12 degrees from the level line.

Connecting projectors

To use Intellectual Stack, connect an RS-232C cross cable between the **CONTROL** port of Set **A** and Set **B**.

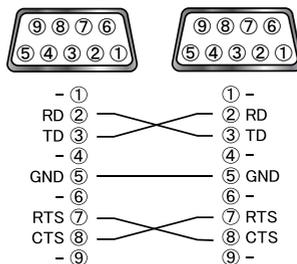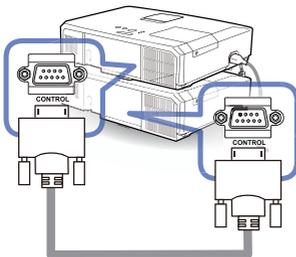

Setting up Set B

1. Turn on Set B.

NOTE • After turning on Set B, make sure the image of Set B is not significantly tilted compared to the image of Set A. If the image is overly tilted, rotate the elevator feet of Set B to adjust the angle such that the tilt is just about right. Check again that there is a gap of about 1 mm between the protrusion at the bottom of Set B and the top of Set A.

2. Reset the adjustment of KEYSTONE and PERFECT FIT on Set B.

([Operator's Guide](#) → *EASY MENU* or *SETUP menu*)

NOTE • KEYSTONE cannot be operated when PERFECT FIT is in use. To reset both functions, reset PERFECT FIT first.

• Perform the MIRROR setting first if necessary as it may change the image position. ([Operator's Guide](#) → *SETUP menu*)

3. Adjust the image size and position of Set B with the ZOOM ring, VERTICAL adjuster, HORIZONTAL adjuster and FOCUS ring such that the image can be superimposed well to the image of Set A.

NOTE • Fine adjustment of the image size and position thereafter with functions such as KEYSTONE and PERFECT FIT does not increase the image size. It is therefore important to have the image of Set B completely overlapping the image of Set A.

• When controlling Set B with the remote control, Set A may also respond to the remote control. It is recommended to control Set B with the control panel on Set B.

• When two projectors are arranged side by side, adjust the image of Set B to superimpose well to the image of Set A.

• If you are using Simple Stack, it is recommended to disable the remote control receiving on Set B using KEY LOCK and operate using the control panel or a wired remote control as Set A will respond to the remote control.

([Operator's Guide](#) → *OPTION menu*)

• If you are using Simple Stack, go to *For Simple Stack users.* ([16](#))

 
4. Display the menu with the MENU button. ([Operator's Guide](#) → *Using the menu function*)

5. Use the ▲/▼/◀/▶ buttons to go into the following menu.

ADVANCED MENU > OPTION
> SERVICE > COMMUNICATION
> STACK

STACK menu will appear on screen.

([Operator's Guide](#) → *OPTION menu*)



(continued on next page)

2.3 Installing the second projector (Set B) - Setting up Set B (continued)

- 6.** Use the ▲/▼ buttons to highlight STACK MODE, and press the ► button to display the STACK MODE dialog.



 
Highlight MAIN with the ▲/▼ buttons, and press the ◀ button to return to the previous menu.

- 7.** Use the ▲/▼ buttons to highlight LAMP MODE, and press the ► button to display the LAMP MODE dialog.



Highlight DUAL with the ▲/▼ buttons, and press the ► button.

- 8.** After pressing the ► button, a dialog to confirm whether or not to save the setting is displayed.



Press the ► button to complete the setting.

([📖](#) 23)

2.4 Confirming Main and Sub settings

 
1. Press the **MENU** button on the remote control for Main (Set **B**).

NOTE • When Intellectual Stack is in use, only Main is capable of receiving the remote control signals, Sub will not respond to the remote control signals.

2. The following dialogs appear on the lower right screen.



Main (Set **B**)



Sub (Set **A**)

3. If you press the ► button, the dialog closes and the Main (Set **B**) menu will appear when MAIN is highlighted.
If you press the ◀ button, the dialog closes and the menu will disappear.


NOTE • If these dialogs are not displayed on screen, check the RS-232C connection ([11](#)) and the MAIN or SUB setting in the STACK MODE dialog. ([18](#))

2.5 Fine adjusting image position

To superimpose the images of Main (Set **B**) and Sub (Set **A**), fine adjust the image size and position of Main (Set **B**) using PERFECT FIT.

For Intellectual Stack users

 1. Press the **MENU** button on the remote control or the control panel on Main (Set **B**) to display the MENU dialog. Highlight MAIN with the **▲/▼** buttons, and press the **▶** button.



Main (Set **B**)

Menu on Main (Set **B**) will appear.

2. Using the **▲/▼/◀/▶** buttons on the remote control or the control panel on Main (Set **B**), select PERFECT FIT from EASY MENU, or the SETUP menu of ADVANCED MENU. ([Operator's Guide](#) → [EASY MENU](#) or [SETUP menu](#))

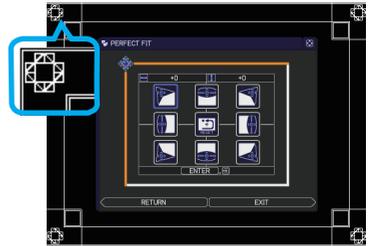


Image from Main (Set **B**)

The image for Intellectual Stack appears on screen. This image includes a TEMPLATE screen with the PERFECT FIT dialog from Main (Set **B**) and another TEMPLATE screen from Sub (Set **A**).

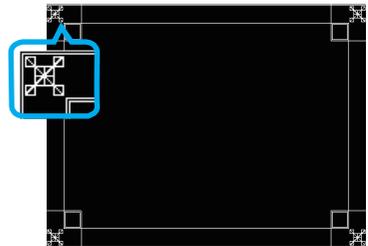


Image from Sub (Set **A**)


3. Using PERFECT FIT on Main (Set **B**), adjust the image size and position of Main (Set **B**) to superimpose well to the image of Sub (Set **A**). ([Operator's Guide](#) → [EASY MENU](#) or [SETUP menu](#))

It is recommended to adjust in the following ways.

- (1) Roughly adjust the four corners in the order below.

Top left → Top right
→ Bottom right → Bottom left

- (2) Fine adjust the four corners in the same way.

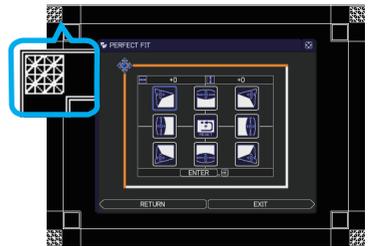


Superimposed image


NOTE • Refer to [NOTES for all users](#). ([Operator's Guide](#) 16)

For Simple Stack users

1. Press the **MENU** button on the remote control to display the menu on Set **A**.
2. Use the ▲/▼/◀/▶ buttons to open the TEMPLATE dialog, then select STACK on the dialog. ([📖 Operator's Guide](#) → [SCREEN menu](#))
3. Press the **MENU** button on the control panel of Set **B** to display the menu.
4. Use the ▲/▼/◀/▶ buttons to select PERFECT FIT from EASY MENU, or the SETUP menu of ADVANCED MENU. ([📖 Operator's Guide](#) → [EASY MENU](#) or [SETUP menu](#))
PERFECT FIT dialog appears on screen.
5. Using PERFECT FIT on Set **B**, adjust the image size and position of Set **B** to superimpose well to the image of Set **A**. It is recommended to adjust in the following ways.
 - (1) Roughly adjust the four corners in the order below.
Top left → Top right → Bottom right → Bottom left
 - (2) Fine adjust the four corners in the same way.

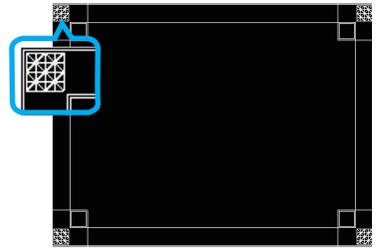

STACK of TEMPLATE

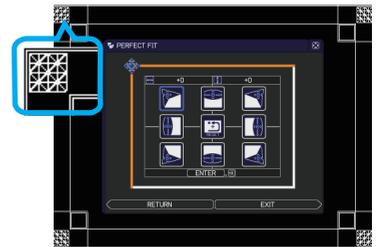

PERFECT FIT dialog
on STACK of TEMPLATE

NOTES for all users • For details on PERFECT FIT, refer to [PERFECT FIT](#) of [EASY MENU](#) or [SETUP menu](#) in the [Operator's Guide](#).

- When arranging the projectors side by side (Style 2), it is also necessary to adjust the image position of one projector in accordance with the other projector as explained above.
- It is strongly recommended to use a flat screen. If a curved or skewed screen is used, it is very difficult to align the two images even if you use the pin/barrel adjustment of PERFECT FIT.
- Even through fine adjustment of the images from the two projectors, it may not be possible to superimpose the images well enough depending on the input signals. In this case, try the following methods.
 - Press the **AUTO** button on the remote control or execute AUTO ADJUST EXECUTE ([📖 Operator's Guide](#) → [IMAGE menu](#)) on each of the projectors.
 - Adjust H POSITION and V POSITION ([📖 Operator's Guide](#) → [IMAGE menu](#)) on each of the projectors.
 - Check the RESOLUTION setting in the INPUT menu, and change to the same setting if the setting differs between Main and Sub. ([📖 Operator's Guide](#) → [INPUT menu](#))

3. STACK menu settings

Set the Intellectual Stack operation using the STACK menu.

NOTE • If you are using Simple Stack without RS-232C connection, skip this chapter.

- If you do not need to change the settings made during the installation explained prior to this chapter, go to [3.3 Selecting lamp operation mode](#). (📖19)
- Read [3.7 Important information for Intellectual Stack](#) carefully. (📖24)

3.1 Displaying STACK menu

Use the ▲/▼/◀/▶ buttons to go into the following menu.

 
ADVANCED MENU > OPTION

> SERVICE > COMMUNICATION > STACK

STACK menu will appear on screen.

(📖Operator's Guide → [OPTION menu](#)) The

setting for Intellectual Stack operation starts from this menu.



NOTE • Check that the following settings are made on both projectors. Otherwise, STACK menu on the projectors cannot be operated. (📖7)

- STANDBY MODE in SETUP menu: NORMAL
(📖Operator's Guide → [SETUP menu](#))
- COMMUNICATION TYPE under COMMUNICATION in SERVICE menu: OFF
(📖Operator's Guide → [OPTION menu](#))
- STACK LOCK in SECURITY menu: OFF (📖7)

3.2 Selecting Main, Sub or off

To enable Intellectual Stack, select either MAIN or SUB. Intellectual Stack starts when one projector is set to MAIN and the other is set to SUB in the STACK MODE dialog. To disable Intellectual Stack, select OFF.

1. Highlight STACK MODE in the STACK menu with the ▲/▼ buttons, then press the ► button to display the STACK MODE dialog.



2. Use the ▲/▼ buttons in the dialog to highlight MAIN, SUB or OFF.


OFF: Disables Intellectual Stack.

MAIN: Sets the projector to Main that functions as a control tower.

SUB: Sets the projector to Sub that functions as a follower.

3. Press the ◀ button to return to the previous menu, or press the ► button to complete the setting. (📖23)

NOTE • After setting Main or Sub, the setting information can be checked on Web Control. (📖Network Guide → Web Control) Select Projector Status in the main menu of Web Control. The Stack Mode item shows whether your projector is set to MAIN or SUB even if STACK MODE is set to OFF.

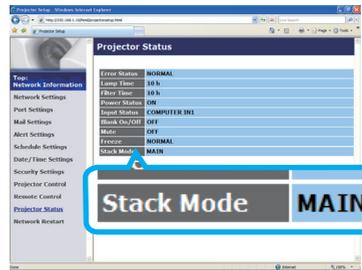

3.3 Selecting lamp operation mode

Select the DUAL or ALTERNATE lamp operation mode.

1. Highlight LAMP MODE in the STACK menu with the ▲/▼ buttons, then press the ► button to display the LAMP MODE dialog. 
2. Use the ▲/▼ buttons in the dialog to highlight DUAL or ALTERNATE.
DUAL: Turns on the projectors at the same time.
ALTERNATE: Turns on the projectors alternately.
3. Press the ◀ button to return to the previous menu, or press the ► button to complete the setting. (📖23)

NOTE • If DUAL is selected, a menu to select MAIN or SUB appears on screen when a button on the control panel of the projector or remote control is pressed. Select the projector that you want to operate. Refer to the examples below.

- When the **MENU** button is pressed, a menu to select MAIN or SUB is displayed. If MAIN is selected, EASY MENU or ADVANCED MENU of the Main projector is displayed.
- When the **KEYSTONE** button is pressed, a menu to select MAIN or SUB is displayed. If MAIN is selected, KEYSTONE menu of the Main projector is displayed.
- When DUAL is selected for LAMP MODE, there are operating restrictions as follows.
 - AUTO POWER OFF and FREEZE functions on both projectors are disabled.
 - The test patterns for CUSTOM of GAMMA and COLOR TEMP are not displayed.
 - It takes slightly longer time to turn on the projectors. This is not a malfunction.



(continued on next page)

 
3.3 Selecting lamp operation mode (continued)

- NOTE** • When DUAL is selected for LAMP MODE, the images projected from the Main and Sub projectors may be different. It is recommended to set the projectors as follows.
- Set the same image for TEMPLATE and START UP on the Main and Sub projectors.
 - Capture the same image for MyScreen on the Main and Sub projectors.
 - Save the same image on MY IMAGE on the Main and Sub projectors.
 - Set the same message content for the Messenger function ([📖 Network Guide](#) → [Messenger Function](#)) on the Main and Sub projectors.
 - When DUAL is selected for LAMP MODE, image shift can result in image quality degradation on the screen. Perform the MIRROR setting before adjusting the image position as the image position will change when the MIRROR setting is changed. ([📖 Operator's Guide](#) → [SETUP menu](#))
 - When ALTERNATE is selected and an error occur on the projector in operation causing the lamp to turn off, the other projector will automatically start to operate. However, if the RS-232C cable is disconnected or AC power is not supplied, the other projector will not turn on.
 - In cases when PIN LOCK or TRANSITION DETECTOR on both projectors is set to ON ([📖 Operator's Guide](#) → [SECURITY menu](#)), the two projectors will not turn on even if ALTERNATE is selected. Enter the security code on both projectors and one of the projectors will turn on.
 - When Intellectual Stack is in use, the **POWER** indicator on the control panel of the projector operates differently than normal. ([📖 Operator's Guide](#) → [Troubleshooting](#)) When the Main and Sub projectors are in standby mode, the Main projector determines which projector to turn on according to the STACK MODE setting if the **STANDBY/ON** button on the remote control or control panel of the Main projector is pressed.
 - The **POWER** indicator on the Main projector blinks in green while the Main projector determines which projector to turn on.
 - If the Main projector is turned on, the **POWER** indicator on the Main projector turns to steady green after lighting up, as per normal.
 - If the Sub projector is turned on, the **POWER** indicator on the Main projector lights in orange after the Sub projector is turned on.
 - If an error occurs on the Main projector, the Sub projector turns on and the **POWER** indicator on the Main projector lights or blinks in red.

3.4 Selecting lamp switching mode

The following setting is necessary only when ALTERNATE is selected in the LAMP MODE dialog. (📖19) Select the AUTO or NORMAL lamp switching mode when using ALTERNATE.


1. Highlight ALTERNATE MODE in the STACK menu with the ▲/▼ buttons, then press the ► button to display the ALTERNATE MODE dialog.
2. Use the ▲/▼ buttons in the dialog to highlight AUTO or NORMAL.
AUTO: Turns on the projector with the least lamp usage.
NORMAL: Turns on the projector that was not used the previous time.
3. Press the ◀ button to return to the previous menu, or press the ► button to complete the setting. (📖23)



NOTE • The ALTERNATE MODE dialog can be operated on the Main projector when ALTERNATE is selected in the LAMP MODE dialog.
• To maintain the quality and reliability of the two projectors, the projector with the most lamp usage may be turned on even if AUTO is selected.

3.5 Selecting input source for Sub

 1. Highlight SUB INPUT SOURCE in the STACK menu with the ▲/▼ buttons, then press the ► button to display the SUB INPUT SOURCE dialog.
2. Use the ▲/▼ buttons in the dialog to highlight FOLLOW MAIN UNIT or FIXED (COMPUTER IN 1).
FOLLOW MAIN UNIT: Sets the input source on the Sub projector to the same port as Main.
FIXED (COMPUTER IN 1): Sets the input source on the Sub projector to the **COMPUTER IN1** port which is connected to the **MONITOR OUT** port on the Main projector.
3. Press the ◀ button to return to the previous menu, or press the ► button to complete the setting. (📖23)



NOTE • If **FIXED (COMPUTER IN 1)** is selected, either the **COMPUTER IN1** or **IN2** port can be selected as an input source on the Main projector. When the **COMPUTER** or **VIDEO** button on the remote control or the **INPUT** button on the projector is pressed, the **MAIN INPUT SOURCE** dialog will be displayed on screen. Select **COMPUTER IN 1** or **COMPUTER IN 2** with the ▲/▼ buttons.

- If **FIXED (COMPUTER IN 1)** is selected, the **COMPUTER IN1** port on the Sub projector should be connected to the **MONITOR OUT** port on the Main projector with a computer cable. The image from the selected port is output from the **MONITOR OUT** port on the Main projector to the **COMPUTER IN1** port on the Sub projector. The **MONITOR OUT** setting on the Main projector is disabled when **FIXED (COMPUTER IN 1)** is selected. (📖*Operator's Guide* → *SETUP menu*)

- If **FIXED (COMPUTER IN 1)** is selected, video signals can be input to the **COMPUTER IN1** or **IN2** port on the Main projector. Set the port for video signal input in the **COMPUTER IN** menu and set the video format in the **VIDEO FORMAT** menu. Refer to *Inputting image from Main to Sub* (📖28) and *Inputting image from Main to Sub - Video signal (either component or video)*. (📖32)

3.6 Exiting Intellectual Stack menu

 
Before exiting menu operation for Intellectual Stack, it is recommended to check all the settings in the STACK menu. For dialogs that are called from the STACK menu, you can press the ◀ button to return to the STACK menu.

Refer to the following to exit menu operation for Intellectual Stack.

STACK menu

When you press the ◀ button (functioning as RETURN key) after performing some changes to the settings, a confirmation dialog will appear.



- Pressing the ▶ button (functioning as YES key) in the dialog saves the setting and closes the dialog. The screen becomes black while the setting is being applied. Please wait for a while.
- Pressing the ◀ button (functioning as NO key) in the dialog returns you to the COMMUNICATION menu without saving the setting. ([📖 Operator's Guide](#) → [OPTION menu](#) → [SERVICE](#))



Dialog from STACK menu

When you press the ▶ button (functioning as EXIT key) after performing some changes to the settings, a confirmation dialog will appear.

  - Pressing the ▶ button (functioning as YES key) in the dialog saves the setting and closes the dialog. The screen becomes black while the setting is being applied. Please wait for a while.
- Pressing the ◀ button (functioning as NO key) in the dialog closes the dialog without saving the setting.



3.7 Important information for Intellectual Stack

This section provides important information for setting up the Main and Sub projectors, not explanations on operating the menus. Read all information carefully.

- To use Intellectual Stack, one projector must be set to Main and the other set to Sub.
- When stacking the two projectors, the control panel of the projector placed underneath cannot be operated. It is therefore strongly recommended to set the projector underneath to Sub and the projector on top to Main.
- All buttons except the **STANDBY/ON** button on the control panel of the Sub projector are disabled. Operate the projectors with the control panel of the Main projector or the remote control.
- Pressing the **STANDBY/ON** button of the Sub projector does not allow you to turn off only the Sub projector. The Main and Sub projectors turn off when the button is pressed for more than 3 seconds. And pressing the button does not turn on the Main or Sub projector.
- The Main projector is capable of receiving the remote control signals but not the Sub projector so the remote control should be pointed at the Main projector.
- If a wired remote control is used, connect the cable to the Main projector instead of the Sub projector.
- For simple PC mouse & keyboard functions, connect both the Main and Sub projectors to your computer with USB cables. ([📖 Operator's Guide](#) → *Using as a simple PC mouse & keyboard*)
- AUTO SEARCH function is disabled when the projector is used in Intellectual Stack.
- Network communication to Sub and Web Control on Sub cannot turn on the Sub projector. The Sub projector can only be controlled through the Main projector.
- Remote Control function on Web Control of the Sub projector is disabled. ([📖 Network Guide](#) → *3.11 Remote Control*)
- If you try to turn on the projectors using the Power on & Display on feature on the Messenger function, the projectors will exit Intellectual Stack and display the specified message. To start Intellectual Stack again, re-select MAIN/SUB on both projectors in the STACK MODE dialog, or turn off and on both projectors again.
- The Main and Sub projectors have the following common settings.
 - Muting feature ([📖 Operator's Guide](#) → *Temporarily muting the sound*)
 - Magnifying feature ([📖 Operator's Guide](#) → *Using the magnify feature*)
 - ASPECT and OVER SCAN ([📖 Operator's Guide](#) → *IMAGE menu*)
 - COMPUTER IN ([📖 Operator's Guide](#) → *INPUT menu*)
 - MESSAGE ([📖 Operator's Guide](#) → *SCREEN menu*)
 - MY BUTTON ([📖 Operator's Guide](#) → *OPTION menu*)
 - TEMPLATE ([📖 Operator's Guide](#) → *SCREEN menu*)

(continued on next page)

3.7 Important information for Intellectual Stack (continued)

- The following functions are disabled.
 - Executing of AUTO KEYSTONE ([Operator's Guide](#) → [SETUP menu](#))
 - STANDBY MODE ([Operator's Guide](#) → [SETUP menu](#))
 - AUTO SEARCH ([Operator's Guide](#) → [OPTION menu](#))
 - Turning on/off AUTO KEYSTONE ([Operator's Guide](#) → [OPTION menu](#))
 - DIRECT POWER ON ([Operator's Guide](#) → [OPTION menu](#))
 - MY SOURCE ([Operator's Guide](#) → [OPTION menu](#))
 - COMMUNICATION TYPE ([Operator's Guide](#) → [OPTION menu](#) → [SERVICE](#) → [COMMUNICATION](#))
- The input source from the following ports cannot be selected.
 - **USB TYPE A, USB TYPE B, LAN**
- When Intellectual Stack is in use, an error message will be displayed if an error occurs on any of the projectors.

When an error occurs, a full dialog will be displayed on screen. The full dialog changes to a small dialog after about 20 seconds without any key activity. While the small dialog is displayed, pressing the ◀ button displays a full dialog again.

The numbers “1” and “2” above the projector icons represent the Main and Sub projectors respectively.

Refer to the on-screen messages as shown below and take the necessary actions to resolve the problem.

Example:

Cover Error: Lamp cover is opened.



Lamp Error: Lamp does not light up.



Fan Error: Problem with cooling fan.



Temp Error: Temperature of the projector is too high.



Air Flow Error: Temperature of the projector is too high, check that the exhaust vents are not blocked.



Filter Error: The reading on the filter timer exceeds the hours set in the FILTER MESSAGE menu. ([Operator's Guide](#) → [OPTION menu](#) → [SERVICE](#))



Cold Error: The ambient temperature is too low.



(continued on next page)

3.7 Important information for Intellectual Stack (continued)

- If you need to turn off a projector for reasons such as taking corrective actions for an error, turn off both the projectors so that Intellectual Stack can be started properly when the projectors are turned on again.
- If the PIN LOCK or TRANSITION DETECTOR security function on both projectors is set to ON, both projectors will turn on. Enter the security code for Main first then followed by Sub. If ALTERNATE mode is selected, one of the projectors will turn off automatically. ( [Operator's Guide](#) → [SECURITY menu](#))
- If the PIN LOCK or TRANSITION DETECTOR security function on one of the projectors is set to ON, it is necessary to enter the security code as follows when turning on the projector.
 - In DUAL mode, both projectors will turn on. Enter the security code for the projector that is locked by the security function.
 - In ALTERNATE mode, if the projector locked by the security function is due to turn on according to the ALTERNATE mode setting, only that projector will turn on. Otherwise, both projectors will turn on. Enter the security code for the projector that is locked by the security function. After the security lock is released, one of the projectors will turn off if both projectors are turned on.

4. Connecting cables

To superimpose two images onto one screen, the same image must be input to the Main and Sub projectors. There are various methods to input the image to the projectors. This chapter describes the ways of connecting the cables. Read this chapter to find a method that meets your needs.

NOTE • If Simple Stack without an RS-232C connection is used, the Main and Sub projectors described below do not exist. Main in this chapter is read as one projector and Sub as the other projector.

• For details on the specifications of the input ports, refer to [Connecting with your devices](#) ([Operator's Guide](#) → [Setting up](#)) and [Connection to the ports.](#) ([Operator's Guide - Technical](#))

4.1 Connecting an RS-232C cable

If you are using Intellectual Stack, connect an RS-232C cross cable between the RS-232C ports on the Main and Sub projectors. ([11](#)) This connection is not required if you are using Simple Stack.

NOTE • If the RS-232C cable connecting the two projectors operating in Intellectual Stack is disconnected, the projectors will exit from Intellectual Stack and start to operate individually. Intellectual Stack will not restart even if the cable is reconnected. Follow the procedures below to restart Intellectual Stack.

- (1) Do not operate the projectors for more than 10 seconds after disconnecting the cable to allow the projectors to recognize the disconnection of the cable.
- (2) Turn off both projectors and allow them to cool sufficiently.
- (3) Reconnect the two projectors with the RS-232C cable and turn them on again. Intellectual Stack will restart.


4.2 Connecting signal cables

There are two methods to input image to the Sub projector. (22, 23)

- Inputting image from the **MONITOR OUT** port on Main to Sub.
- Inputting image to Sub and Main individually.

Inputting image from Main to Sub

1. Connect the **MONITOR OUT** port on Main to the **COMPUTER IN1** port on Sub with a computer cable.
2. Connect the image output device to one of the input ports on Main.

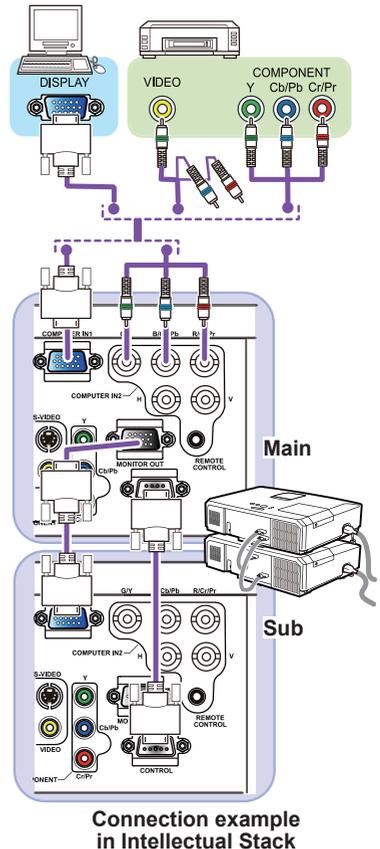

NOTES for Intellectual Stack

- **COMPUTER IN1** and **IN2** can be used as the input port for the Main projector in Intellectual Stack. Do not use other ports for image input.
- You can input component signals to **COMPUTER IN1** and **IN2**.
- You can input video signals to the Y pin of the component video of **COMPUTER IN1** and **IN2**.

NOTES for Simple Stack

- **COMPUTER IN1** and **IN2** can be used as the input port for the projector that is connected with a computer cable at its **MONITOR OUT** port. ([Operator's Guide](#) → [SETUP menu](#)) If you wish to use other input ports, input the image to Sub and Main individually.

Inputting image to Sub and Main individually

1. Split the output signal from your image device into two with device such as a signal splitter.
2. Connect the output ports of the image output device to the same input ports on the Main and Sub projectors.

NOTES for Intellectual Stack • **LAN**, **USB TYPE A** and **USB TYPE B** cannot be used as the input ports on the Main projector in Intellectual Stack.

NOTES for Simple Stack • Any of the ports that is compatible with the signal can be used. Input the same signal to the two projectors individually.

5. Setting input ports using menu

5.1 Preparing for menu operations

If Simple Stack without an RS-232C connection is used, press the **COMPUTER** or **VIDEO** button on the remote control or the **INPUT** button on the control panel to select the port to which the cable is connected. For setting of MONITOR OUT, refer to *SETUP menu* in *Operator's Guide*.

This completes the setting.

If Intellectual Stack with the RS-232C connection is used, all settings or modifications related to Intellectual Stack menu operations must be performed on the Main projector. The Main projector functions according to the input settings for Intellectual Stack.

5.2 Checking Main projector's operating status

For Intellectual Stack, all settings or modifications related to menu operations must be performed on the Main projector. Before operating the menu for Intellectual Stack, check if the Main projector is functioning.

1. Press the **MENU** button on the remote control.
2. If the MENU dialog as shown on the right appears on the screen, the two projectors are operating in DUAL mode and the Main projector is operating.

 


Go to [5.4 Setting the menu](#). (📖31)

If the dialog does not appear, LAMP MODE is set to ALTERNATE and either the Main or Sub projector is operating. Go to next.

3. Use the **▲/▼/◀/▶** buttons to go into the following menu.

```
ADVANCED MENU > OPTION
  > SERVICE > COMMUNICATION
  > STACK
```



STACK menu will appear on screen.

(📖Operator's Guide → *OPTION menu*)

4. Check the STACK MODE setting in the STACK menu.
 - If MAIN is displayed, the Main projector is operating. Go to [5.4 Setting the menu](#). (📖31)
 - If SUB is displayed, the Main projector is turned off and the Sub projector is operating. Go to [5.3 Starting up Main projector](#). (📖30)

5.3 Starting up Main projector

 
After performing section [5.2 Checking Main projector's operating status](#), the two projectors are confirmed to have been set to ALTERNATE mode and the Sub projector is currently operating. As the settings for Intellectual Stack can be changed only when the Main projector is operating, this section explains how to switch from the Sub projector to the Main projector.

1. Use the ▲/▼/◀/▶ buttons to go into the following menu.

ADVANCED MENU > OPTION
> SERVICE > COMMUNICATION > STACK

STACK menu will appear on screen.

([Operator's Guide](#) → [OPTION menu](#))



2. Check the ALTERNATE MODE setting in the menu.

If NORMAL is displayed, the two projectors are turned on alternately. Therefore, the Main projector will be turned on if you restart the projectors.

- (1) Press the **STANDBY/ON** button on the remote control or control panel of the Main projector, the Sub projector will turn off.
- (2) After the projector has cooled down, press the **STANDBY/ON** button to turn on again. The Main projector will be turned on.

If AUTO is displayed, the projector with the least lamp usage is turned on. Therefore, the Main projector may not be turned on even if you restart the projectors. Follow the procedures below to turn on the Main projector.

- (1) Use the ▲/▼ button to highlight STACK MODE, and press the ▶ button to display the STACK MODE dialog.
- (2) Use the ▲/▼ button to highlight OFF, and then press the ▶ button to complete the setting. ([p23](#))
- (3) Repeat the above procedures to display the STACK MODE dialog again.
- (4) Use the ▲/▼ button to highlight SUB, and then press the ▶ button to complete the setting. ([p23](#))
- (5) After exiting the menu, wait for 10 seconds or more.
- (6) Press the **STANDBY/ON** button on the remote control or control panel of the Main projector, the Sub projector will turn off.
- (7) After the projector has cooled down, press the **STANDBY/ON** button to turn on again. The Main projector will be turned on even if LAMP MODE has been set to AUTO.

3. You can change the settings for Intellectual Stack now that the Main projector is operating. Go to [5.4 Setting the menu](#). ([p31](#))

NOTE • If the Main projector cannot be turned on due to error or certain problems, the Sub projector will be turned on even if you follow the procedures above. Take necessary actions to fix the Main projector, and then change the settings for Intellectual Stack.

5.4 Setting the menu

If Intellectual Stack with RS-232C connection is used, observe the followings. When inputting image signals to Sub via Main, the operations differ between using computer signals and video signals such as component and video signals.

Inputting image from Main to Sub - Computer signal

1. If the STACK menu is already displayed on the screen, proceed to 3 below. Otherwise press the **MENU** button on the remote control.

 
If the MENU dialog is displayed, use the ▲/▼ buttons to highlight MAIN, and press the ► button. A menu will be displayed.



If the MENU dialog is not displayed, the STACK menu will appear.

2. Use the ▲/▼/◀/▶ buttons to go into the following menu.

ADVANCED MENU > OPTION
> SERVICE > COMMUNICATION > STACK



STACK menu will appear on screen.

([Operator's Guide](#) → [OPTION menu](#))

3. Use the ▲/▼ buttons to highlight SUB INPUT SOURCE, and press the ► button to display the SUB INPUT SOURCE dialog.
4. Use the ▲/▼ buttons to highlight FIXED (COMPUTER IN 1), and press the ► button to complete the setting. ([Operator's Guide](#))



5. Press the **COMPUTER** or **VIDEO** button on the remote control or the **INPUT** button on the control panel of the Main projector, the MAIN INPUT SOURCE dialog is displayed on screen. Use the ▲/▼ buttons to highlight the port to which the signal cable is connected, and press the ► button to complete the setting.



NOTE • When FIXED (COMPUTER IN 1) is selected, the MONITOR OUT setting is invalid. ([Operator's Guide](#) → [SETUP menu](#))

- When FIXED (COMPUTER IN 1) is selected, input sources other than **COMPUTER IN1** and **COMPUTER IN2** cannot be selected.
- When FIXED (COMPUTER IN 1) is selected, if any button for setting the input ports including **COMPUTER**, **VIDEO**, **MY SOURCE/DOC.CAMERA** and **MY BUTTON** (assigned with input source related functions) buttons on the remote control and the **INPUT** button on the projector is pressed, the dialog for selecting the input source will be displayed.

Inputting image from Main to Sub - Video signal (either component or video)

1. If the STACK menu is already displayed on the screen, proceed to 3 below. Otherwise press the **MENU** button on the remote control. If the MENU dialog is displayed, use the ▲/▼ buttons to highlight MAIN, and press the ► button. A menu will be displayed. If the MENU dialog is not displayed, the STACK menu will appear.



2. Press the **MENU** button on the remote control or control panel on the Main projector. Use the ▲/▼/◀/▶ buttons to open the COMPUTER IN dialog. ([Operator's Guide](#) → *INPUT menu*)
3. To input component signals to **COMPUTER IN1** or **IN2**, set the port to AUTO. Then, use the ▲/▼/◀/▶ buttons to highlight EXIT and press the ► button to complete the setting. To input video signals to **COMPUTER IN1** or **IN2**, set the port to VIDEO. If it is necessary to select a video format, use the ▲/▼/◀/▶ buttons to highlight RETURN and press the ◀ button to display the INPUT menu. Otherwise, use the ▲/▼/◀/▶ buttons to highlight EXIT and press the ► button to complete the setting.

4. Select VIDEO FORMAT in the INPUT menu to display the VIDEO FORMAT dialog.



Select AUTO or an appropriate format for the video signal input.

Then, use the ▲/▼/◀/▶ buttons to highlight EXIT and press the ► button to complete the setting.

Inputting image to Sub and Main individually

 
1. If the STACK menu is already displayed on the screen, proceed to 3 below. Otherwise press the **MENU** button on the remote control. If the MENU dialog is displayed, use the ▲/▼ buttons to highlight MAIN, and press the ► button. A menu will be displayed. If the MENU dialog is not displayed, the STACK menu will appear.

2. Use the ▲/▼/◀/▶ buttons to go into the following menu.

ADVANCED MENU > OPTION
> SERVICE > COMMUNICATION > STACK

STACK menu will appear on screen.



([Operator's Guide](#) → *OPTION menu*)



(continued on next page)

5.4 Setting the menu - Inputting image to Sub and Main individually (continued)

 3. Use the ▲/▼ buttons to highlight SUB INPUT SOURCE, and press the ► button to display the SUB INPUT SOURCE dialog.
4. Use the ▲/▼ buttons to highlight FOLLOW MAIN UNIT, and press the ► button to complete the setting. (📖23)
5. Press the **COMPUTER** or **VIDEO** button on the remote control or the **INPUT** button on the control panel of the Main projector, the MAIN INPUT SOURCE dialog is displayed on screen. Use the ▲/▼ buttons to highlight the port to which the signal cable is connected, and press the ► button to complete the setting.

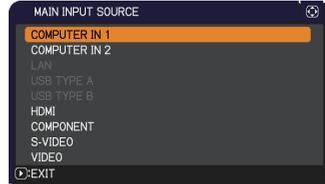

NOTE • If FOLLOW MAIN UNIT is selected, selecting the input source on either the Main or Sub projector will automatically set the other projector to the same source.

- If FOLLOW MAIN UNIT is selected, **LAN**, **USB TYPE A** and **USB TYPE B** cannot be selected.
- When FOLLOW MAIN UNIT is selected, if any button for setting the input ports including **COMPUTER**, **VIDEO**, **MY SOURCE/DOC.CAMERA** and **MY BUTTON** (assigned with input source related functions) buttons on the remote control and the **INPUT** button on the projector is pressed, the dialog for selecting the input source will be displayed.

6. Restrictions on Schedule function

This model supports the Schedule function on the Web Control feature. ([Network Guide](#) → [3. Web Control](#) → [3.7 Schedule Settings](#)) There are some restrictions on the functions when Intellectual Stack with RS-232C connection is used. But for Simple Stack without an RS-232C connection, there is no restriction on the functions.

Regardless of whether Intellectual Stack or Simple Stack is used, take note of the Schedule settings before using the Stack function. Unexpected setting changes may occur when using the Stack function.

Refer to the following for the restrictions concerning Intellectual Stack. If you are using Simple Stack, skip this chapter.

Restrictions on the Main projector

Functions			LAMP MODE			
			DUAL	ALTERNATE		DUAL/ ALTERNATE
	Power status	Main	ON	ON	OFF	OFF
		Sub	ON	OFF	ON	OFF
Power On			✓	✓	✓	✓
Power Off			✓	✓	✓	✓
Input port change			✓ *1)	✓ *1)	✓ *1)	✓ *1)
My Image			✓	✓	X *2)	X *2)
Messenger			✓	✓	X *2)	X *2)
Slide Show			X *3)	X *3)	X *3)	X *3)

Restrictions on the Sub projector

Functions			LAMP MODE			
			DUAL	ALTERNATE		DUAL/ ALTERNATE
	Power status	Main	ON	ON	OFF	OFF
		Sub	ON	OFF	ON	OFF
Power On			X *3	X *3	X *3	X *3
Power Off			✓	✓	✓	✓
Input port change			✓ *1)	✓ *1)	✓ *1)	✓ *1)
My Image			✓	X *2)	✓	X *2)
Messenger			✓	X *2)	✓	X *2)
Slide Show			X *3)	X *3)	X *3)	X *3)

✓ : This Schedule can be input to Web Control and be executed even if the projectors are operating in Intellectual Stack.

✓ *1): This Schedule can be input to Web Control even if the projectors are

(continued on next page)

6. Restrictions on Schedule function (continued)

operating in Intellectual Stack. If the input port to be changed according to the Schedule function can be used in Intellectual Stack, the Schedule will be executed. If not, it will not be executed.

X *2): This Schedule can be input to Web Control when the projectors are operating in Intellectual Stack but it will not be executed.

X *3): This Schedule can neither be input to Web Control nor be executed when the projectors are operating in Intellectual Stack.

- NOTE** • If the Schedule is not executed, an error message will be sent in accordance with the conditions set in Schedule Execution Error on Web Control. ([📖 Network Guide](#) → [3. Web Control](#) → [3.6 Alert Settings](#))
- If the Schedule function is set to turn off the power when the projectors are operating in Intellectual Stack, both the Main and Sub projectors will be turned off.
 - If the Schedule function on the Main projector is set to turn on the power, the projectors will be turned on according to the LAMP MODE setting.
 - When the two projectors are operating in the DUAL mode and a menu is being displayed on one of the projectors, the Schedule function for My Image and Messenger on the other projector will not be executed.
 - Power Off in the table refers to turning off the power and entering into standby mode according to the Intellectual Stack settings or by pressing the **STANDBY/ON** button on the remote control or control panel of the Main projector.
 - The projectors cannot be turned on by the Schedule function on the Sub projector. Set it on the Main projector if necessary.
 - When the Sub projector is turned off according to the ALTERNATE MODE setting, the Schedule function on the Sub projector to turn off its power will be executed without error.

7. Troubleshooting

About the phenomenon confused with a machine defect, check and cope with it according to the following table.

Phenomena that may be easy to be mistaken for machine defects

Phenomenon	Cases not involving a machine defect	Reference page
Intellectual Stack does not function.	<p>No power is supplied to the Main and Sub projector.</p> <p>To use the Intellectual Stack feature, supply AC power to both the Main and Sub projectors. If AC power is supplied to only one of the projectors, Intellectual Stack is disabled.</p>	<p> 8 in <i>Operator's Guide</i></p>
	<p>The RS-232C cable between the Main and Sub projectors is not properly connected.</p> <p>To use the Intellectual Stack feature, connect an RS-232C cross cable between the Main and Sub projectors. If the cable is not connected, the Main projector cannot control the Sub projector.</p>	<p> 11</p>
	<p>The menu settings for Intellectual Stack are not performed correctly.</p> <p>Check the settings of the STACK menu on the Main and Sub projectors. To use the Intellectual Stack feature, one projector must be set to Main and the other projector must be set to Sub.</p>	<p> 18</p>
	<p>Signal cables are not connected correctly.</p> <p>Check the connection of cables. Also check that the cable connection matches with the port settings in the menu.</p>	<p> 28  10 - 14 in <i>Operator's Guide</i></p>
The Main and Sub projector do not operate in synchronization.	<p>The RS-232C cable between the Main and Sub projectors is not properly connected.</p> <p>Connect the RS-232C cable properly and restart the Main projector.</p>	<p> 11</p>

(continued on next page)

7. Troubleshooting (continued)

Phenomenon	Cases not involving a machine defect	Reference page
The STACK menu cannot function.	<p>The settings on the projectors are not set for the Intellectual Stack feature.</p> <p>Check the following settings on the Main and Sub projectors.</p> <ul style="list-style-type: none"> - STANDBY MODE in SETUP menu: NORMAL - COMMUNICATION TYPE under COMMUNICATION in SERVICE menu: OFF - STACK LOCK in SECURITY menu: OFF 	<p> 7</p>
The projector does not respond to the remote control.	<p>The remote control is pointed at the Sub projector.</p> <p>When operating in Intellectual Stack, only the Main projector is capable of receiving the remote control signals. Therefore, point at the Main projector when using the remote control.</p>	<p> 6</p>
The images are either out of focus or not well-superimposed.	<p>The two images are not superimposed correctly.</p> <p>Adjust the ZOOM ring, VERTICAL adjuster, HORISONTAL adjuster and the FOCUS ring to superimpose the images.</p> <p>If necessary, adjust PERFECT FIT and KEYSTONE as well.</p>	<p> 8</p> <p> 15</p>
The images from the two projectors do not superimposed even after performing fine adjustment.	<p>There are some adjustment differences in the two images.</p> <p>Try to resolve the problem with the following measures.</p> <ul style="list-style-type: none"> - Press the AUTO button on the remote control or execute AUTO ADJUST EXECUTE on each of the projectors. - Adjust H POSITION and V POSITION on each of the projectors. - Check the RESOLUTION setting in the INPUT menu, and change to the same setting if the setting differs between Main and Sub. 	<p> 24 in <i>Operator's Guide</i></p> <p> 38 in <i>Operator's Guide</i></p> <p> 42 in <i>Operator's Guide</i></p>

Important Notice

All statements, technical information, and recommendations related to 3M's products are based on information believed to be reliable, but the accuracy or completeness is not guaranteed. Before using this product, you must evaluate it and determine if it is suitable for your intended application. You assume all risks and liability associated with such use. Any statements related to the product which are not contained in 3M's current publication, or any contrary statements contained on your purchase order shall have no force or effect unless expressly agreed upon, in writing, by an authorized officer of 3M.

Warranty

3M warrants that when the 3M Product is used according to 3M's Intended Use Statement (www.3m.com/meetings), it will perform satisfactorily for the warranted durability period as stated in the applicable 3M Product Manual in effect at the time of purchase. The warranties stated in the applicable 3M Product Manuals are exclusive and are made in place of any and all express or implied warranties or conditions, including any implied warranty of merchantability or fitness for a particular purpose, or any industry practice or custom or trade usage.



800-328-1371



**<http://www.3m.com/meetings>
e-mail: meetings@mmm.com**

3M Austin Center
Building A147-5N-01
6801 River Place Blvd.
Austin, TX 78726-9000

3M Canada
P.O. Box 5757
London, Ontario
N6A 4T1

3M Mexico, S.A. de C.V.
Apartado Postal 14-139
Mexico, D.F. 07000
Mexico

3M Europe
Boulevard de l'Oise
95006 Cerge Pontoise Cedex
France

Litho in China
© 3M 2011. All Rights Reserved.
78-6971-1580-2 Rev. A