



PART LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	5	Caster	5	1	Mechanism	9	4	Arm Screw
2	1	Base	6	1	Seat	10	4	Outer Bushing
3	1	Seat Post	7	1	Backrest	11	4	Mechanism Screw
4	1	Seat Post Cover	8	2	Armrest	12	4	Metal Backrest Screw


STEP 1.

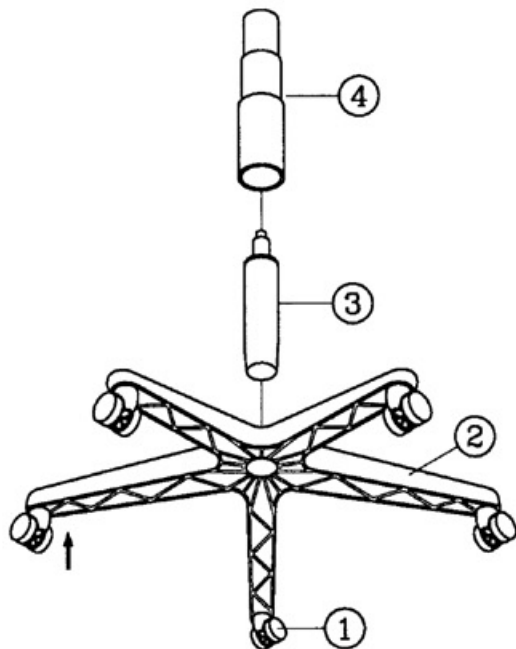

STEP 2.

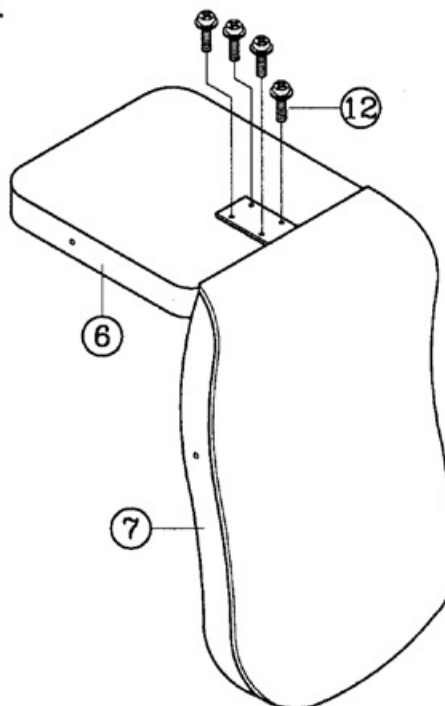

STEP 3.

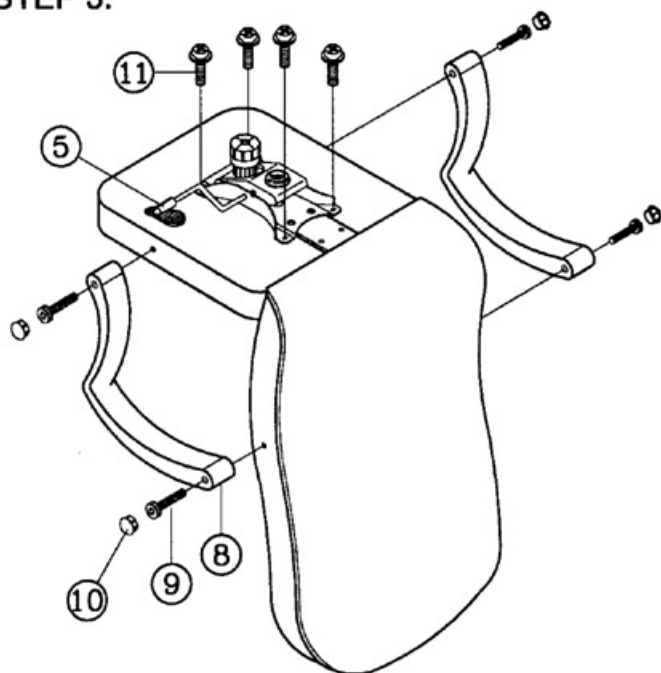

MECHANISM INSTRUCTION WHILE SEATING :

- (A) **SEAT HEIGHT LEVER** : Pull lever up to raise or lower seat . Release when desired position is obtained.
- (B) **TILTER LEVER** : Tension control.
- Blockage of tilter ... reclining inward.
 - Release blockage ... reclining outward.

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT USE CHAIR UNLESS ALL BOLTS , SCREWS AND KNOBS ARE TIGHTENED . AT LEAST EVERY SIX MONTHS , CHECK ALL BOLTS , SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF ANY PARTS ARE MISSING , DAMAGED OR WORN , STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT TO SERIOUS INJURY.