



PART LIST

KEY	QTY	DESCRIPTION	KEY	QTY	DESCRIPTION
1	1	Seat	5	2	Steel Frame with Arm Pad
2	1	Backrest	6	8	Machine Screw
3	4	Metal Backrest Screw	7	8	Outer Bushing
4	1	Steel Tube			


STEP 1.

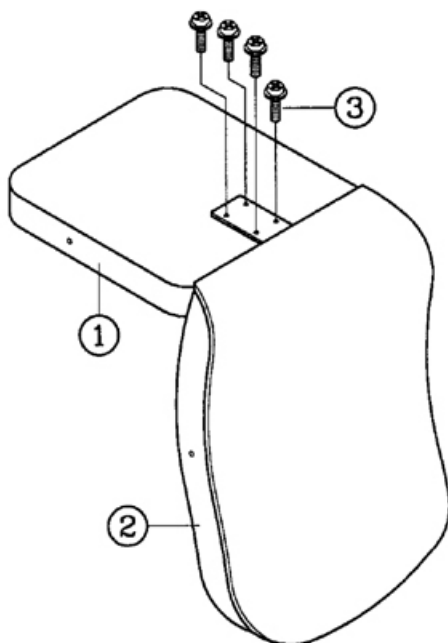


STEP 2.

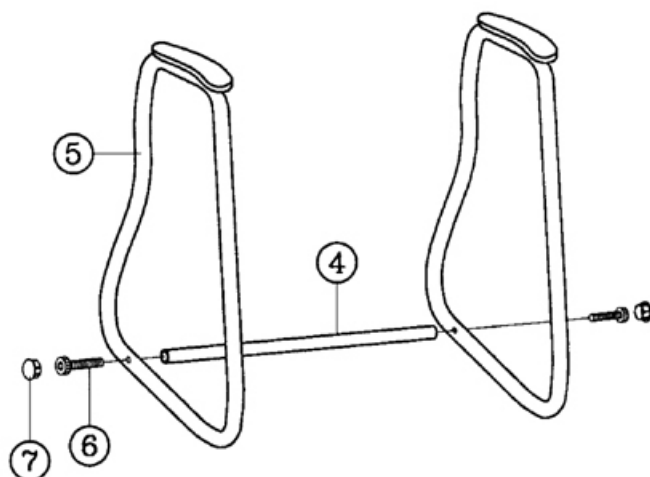

STEP 3.

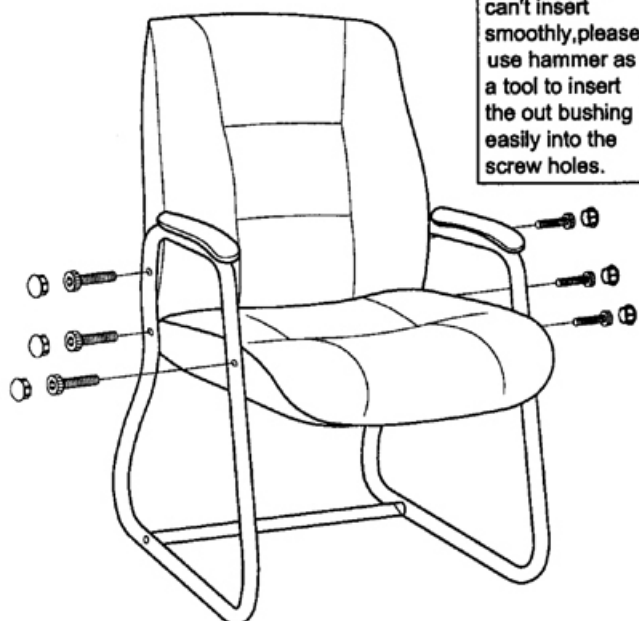

If out bushing
can't insert
smoothly, please
use hammer as
a tool to insert
the out bushing
easily into the
screw holes.

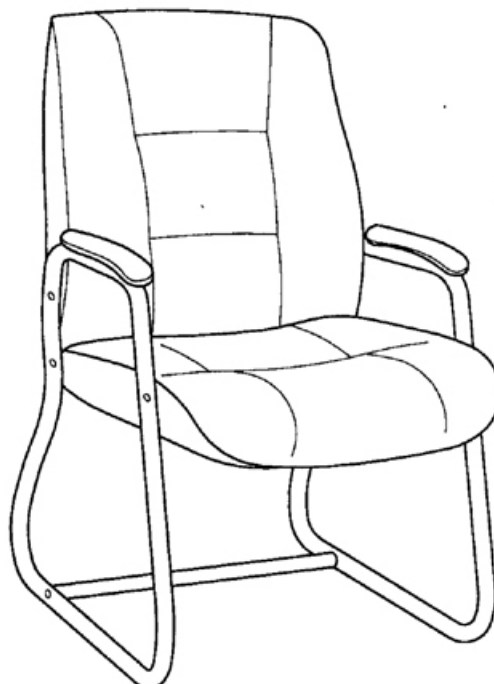

PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT USE CHAIR UNLESS ALL BOLTS , SCREWS AND KNOBS ARE TIGHTENED . AT LEAST EVERY SIX MONTHS , CHECK ALL BOLTS , SCREWS AND KNOBS TO BE SURE THEY ARE TIGHT.
- IF ANY PARTS ARE MISSING , DAMAGED OR WORN , STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT TO SERIOUS INJURY.

564G