
PS660 Quick Start Guide

Important

- * Please activate your warranty at www.lumens.com.tw/reg
- * Please visit our website www.lumens.com.tw/goto.htm to download latest version of Software, Multilingual User Manual and Quick Start Guide.

1. Package Contents

Main Unit

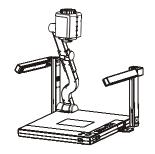


Quick Start Guide



*To download this manual in other languages, visit Lumens website

Remote control



C-Video Cable



Adapter



VGA Cable

USB Cable





* Appearance may vary

in different countries

Power Cord

Extender



Microscope Adapter

Backlight (Optional)




(Optional)



Padded Carry Bag


2. Getting Started

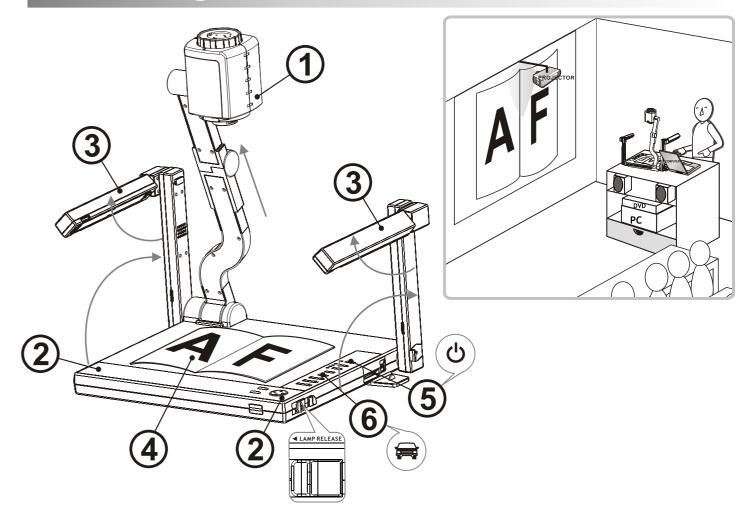


- *The angle range of the camera / lamp arm / lamp is limited. Do not turn it forcefully when it reaches the maximal angle.
- (1) Pull up the camera and the camera arm. The camera should aim at the center of the presenter.
- (2) Press and hold the [LAMP RELEASE] on both sides and push the latches forward to pull up the lamp arm.
- (3) Aim the lamp toward the document.
- (4) Place an object to be displayed under the camera.
- (5) Turn the power on.
- (6) Press the [AUTO TUNE] button to optimize the image. You are ready to teach / present.



▼ Connect to a Projector or Monitor

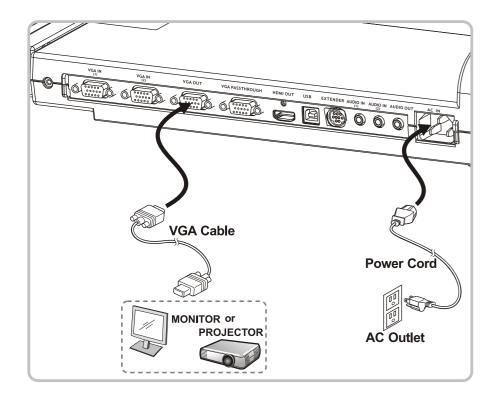


▼ Connect to a Computer and Use Lumens' Software.

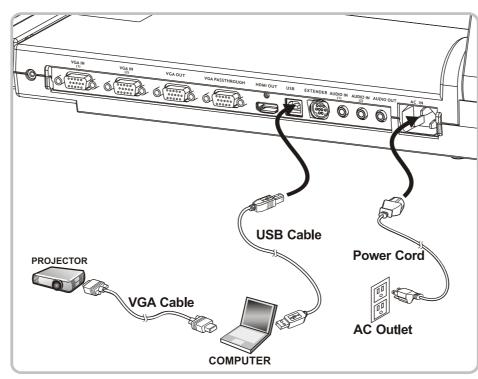


* Driver and software can be downloaded from Lumens website.

▼ Connect a Projector, two Computers and Monitor simultaneously

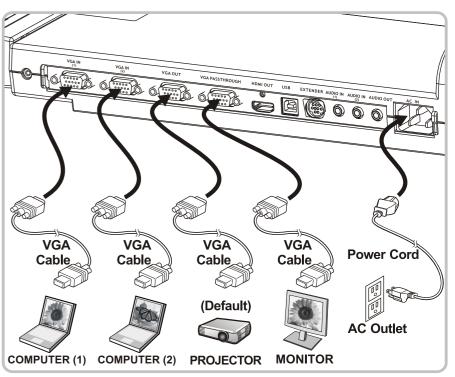


* Press [SOURCE] to change image source from Computer.

▼ Connect to an Interactive Whiteboard (IWB)

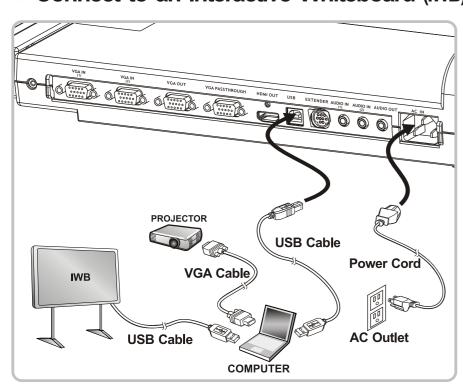

▼ Connect to a TV

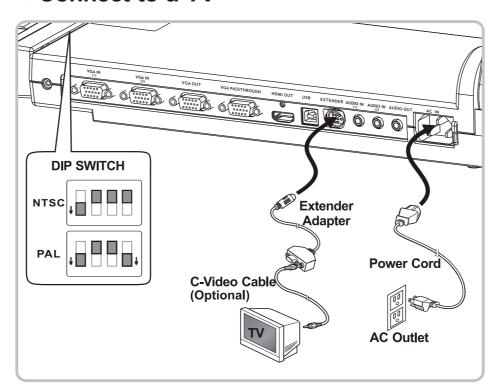

* NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.

- * PAL: Country / region not listed above.
- * After the unit is re-started, new DIP switch configuration is effective.

▼ Connect to an HDTV

